



ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	DR0049	15MM TITANIUM FRONT DROPOUT	2
2	DR4053	DT SWISS COMPATIBLE SCREW-IN NUT FOR 15MM FRONT DROPOUT	1
	DR4054	MAXLE COMPATIBLE SCREW-IN NUT FOR 15MM FRONT DROPOUT	
4	DR4052	SCREW-IN SPACER FOR 15MM FRONT DROPOUT	1
5	DT002	15x100MM DT SWISS RWS SKEWER	1
	N/A	15x100MM MAXLE SKEWER	

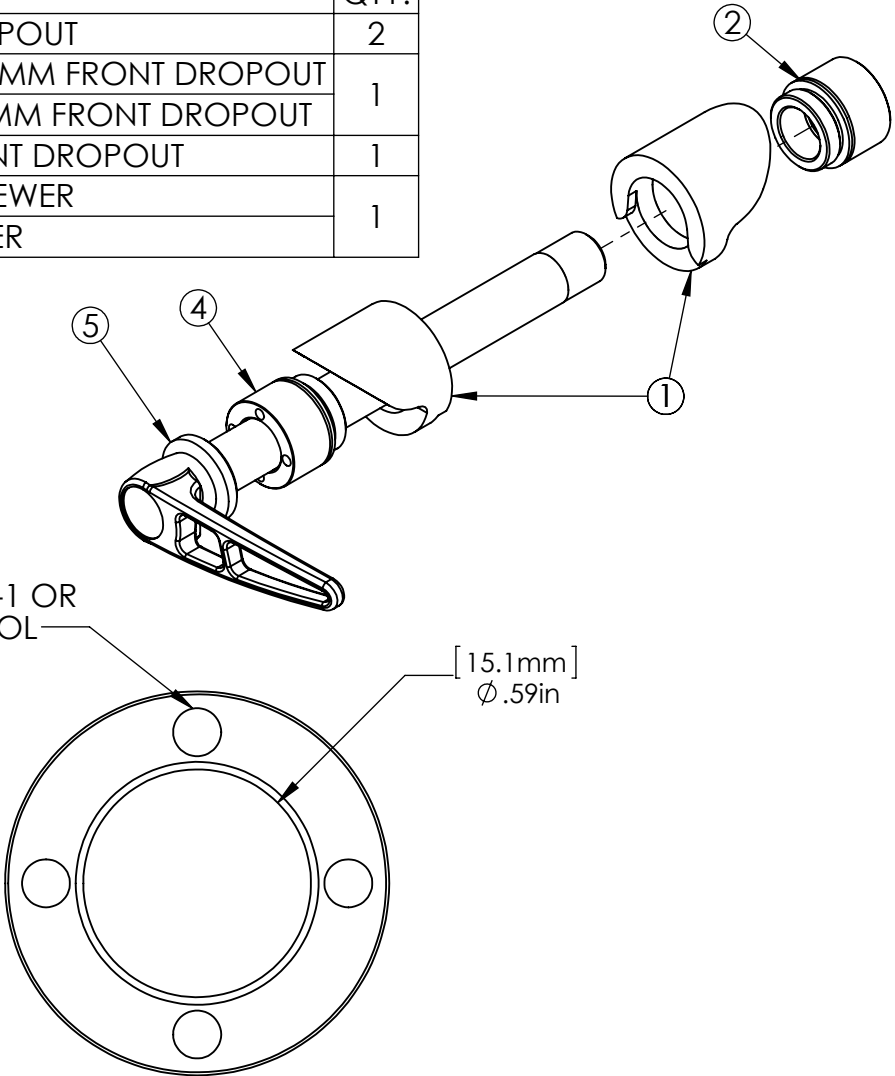

M22x1
(LEFT HAND)

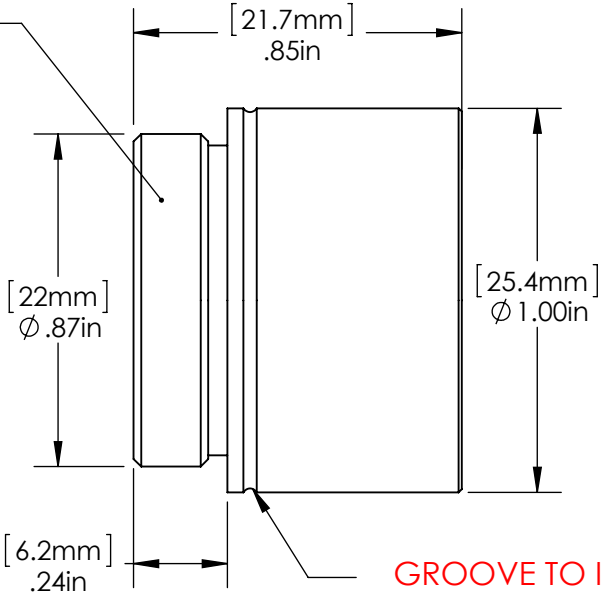

USE PARK SPA-1 OR
SIMILAR BB TOOL

[15.1mm]
Ø .59in

PARAGON MACHINE WORKS

TITLE:
SCREW-IN SPACER
FOR 15MM FRONT
DROPOUT

	NAME	DATE
DRAWN BY:	SWS	02/25/15
CHECKED BY:	MCN	02/25/15
COMMENTS:		

PROPRIETARY AND
CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS
DRAWING IS PROVIDED FOR
FRAMEBUILDERS AND IS THE PROPERTY OF
PARAGON MACHINE WORKS. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
PARAGON MACHINE WORKS IS PROHIBITED.

SIZE	DWG. NO.	REV
A	DR4052	A3