
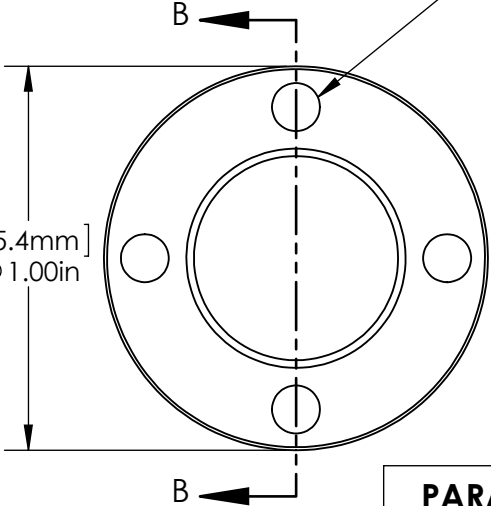
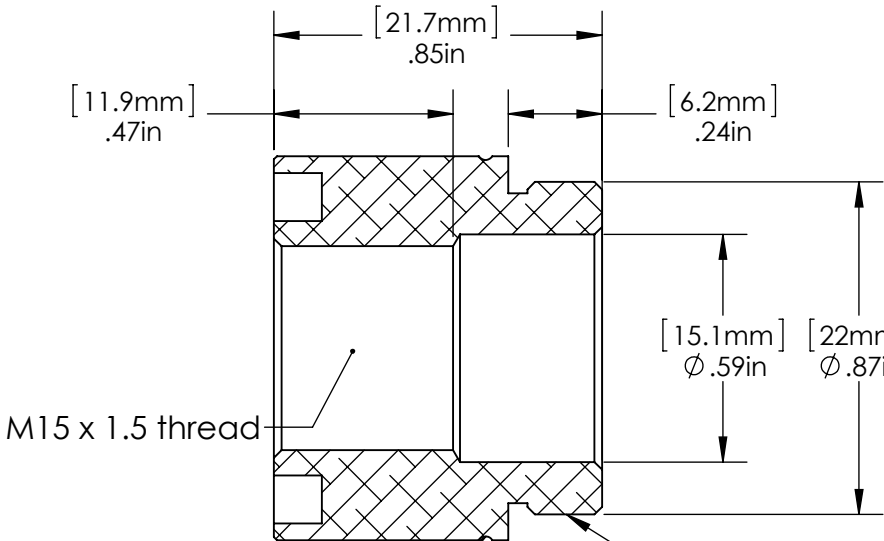


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	DR0049	15MM TITANIUM FRONT DROPOUT	2
2	DR4053	DT SWISS COMPATIBLE SCREW-IN NUT FOR 15MM FRONT DROPOUT	1
3	DR4052	SCREW-IN SPACER FOR 15MM FRONT DROPOUT	1
4	DT002	15x100MM DT SWISS RWS SKEWER	1

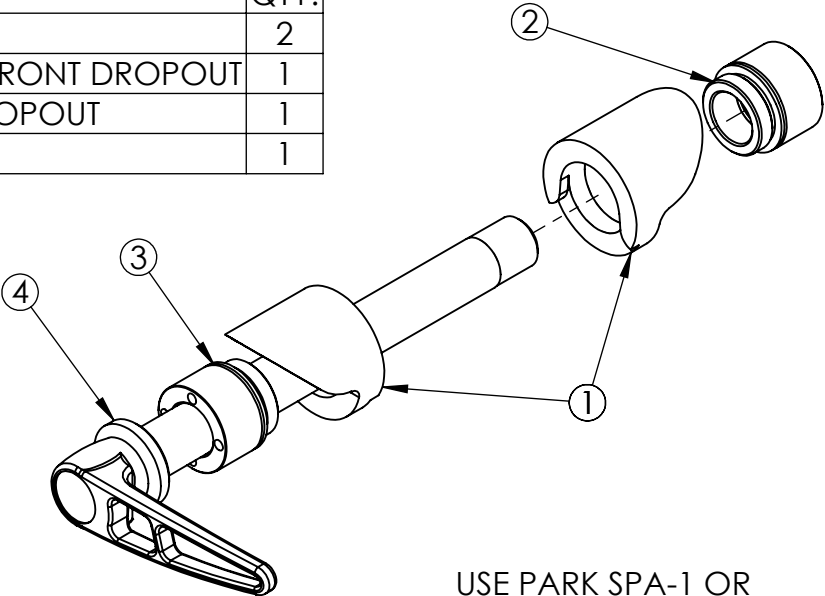

USE PARK SPA-1 OR  
SIMILAR BB TOOL

GROOVE TO IDENTIFY  
LEFT HANDED THREAD

SECTION B-B

M22 x 1  
(LEFT HANDED)

PARAGON MACHINE WORKS

TITLE:  
DT SWISS COMPATIBLE  
SCREW-IN NUT FOR 15MM  
FRONT DROPOUT

	NAME	DATE
DRAWN BY:	SWS	02/12/15
CHECKED BY:	MCN	02/12/15
COMMENTS:		

SIZE	DWG. NO.	REV
A	DR4053	A3

PROPRIETARY AND  
CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS  
DRAWING IS PROVIDED FOR  
FRAMEBUILDERS AND IS THE PROPERTY OF  
PARAGON MACHINE WORKS. ANY  
REPRODUCTION IN PART OR AS A WHOLE  
WITHOUT THE WRITTEN PERMISSION OF  
PARAGON MACHINE WORKS IS PROHIBITED.