


4

3


2

1

B

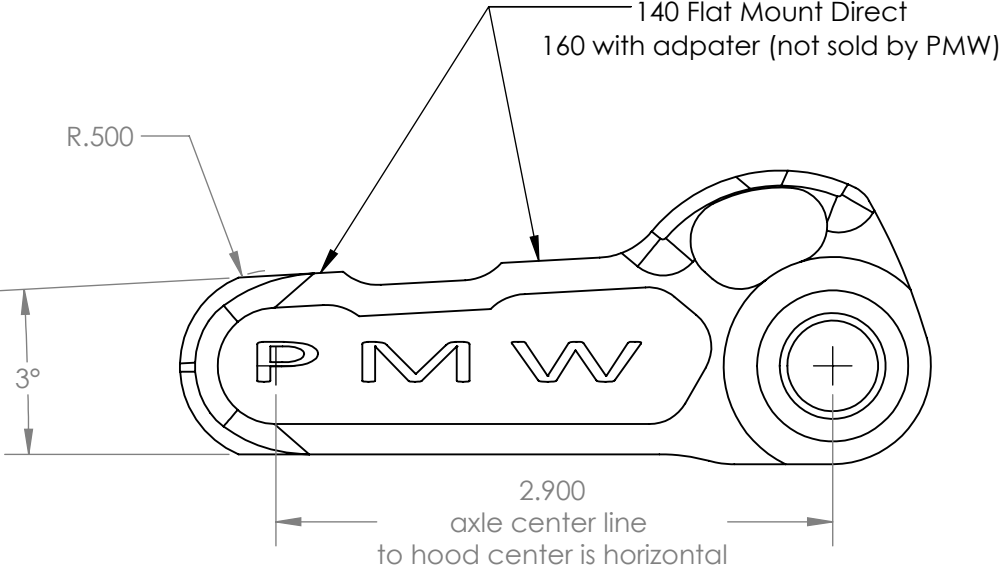

A

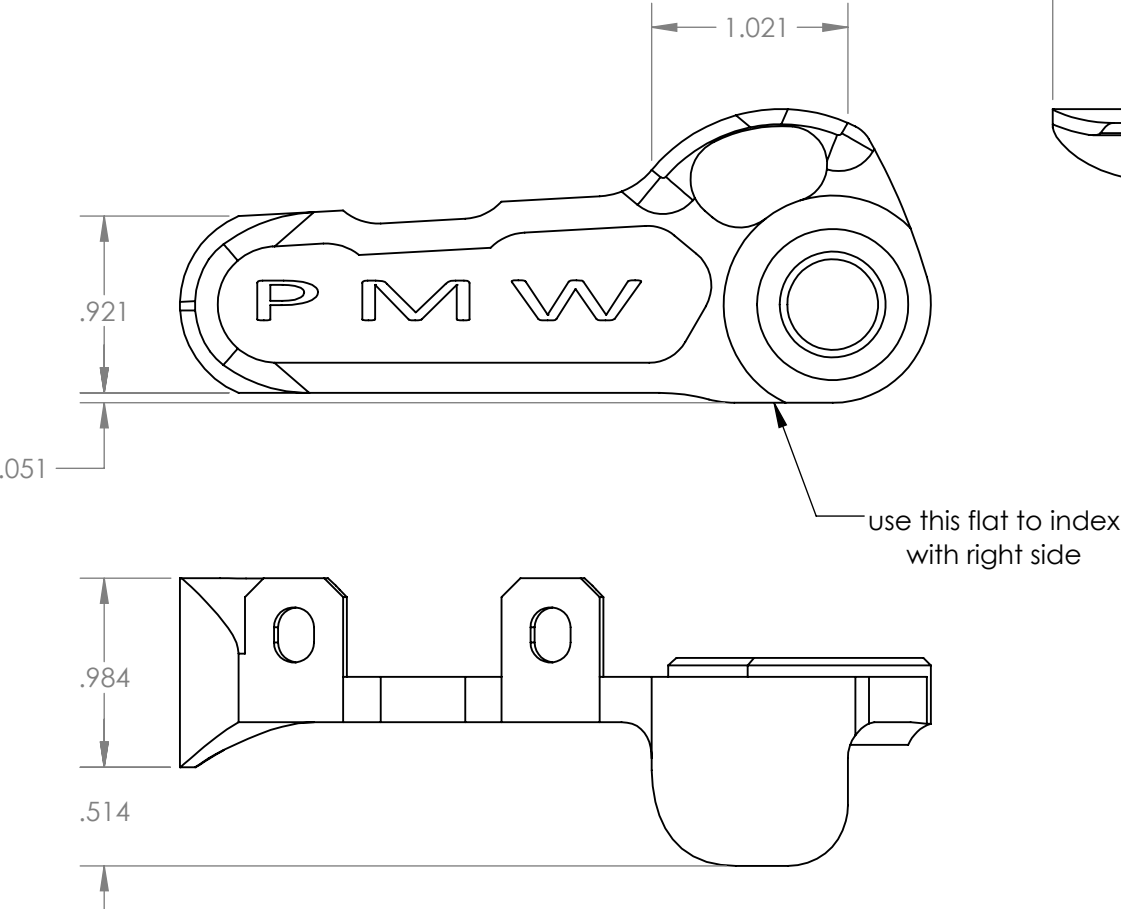

4


3

2


1

B

It is recommended to place the chainstay as outboard as possible in order to avoid interference with clearance mask

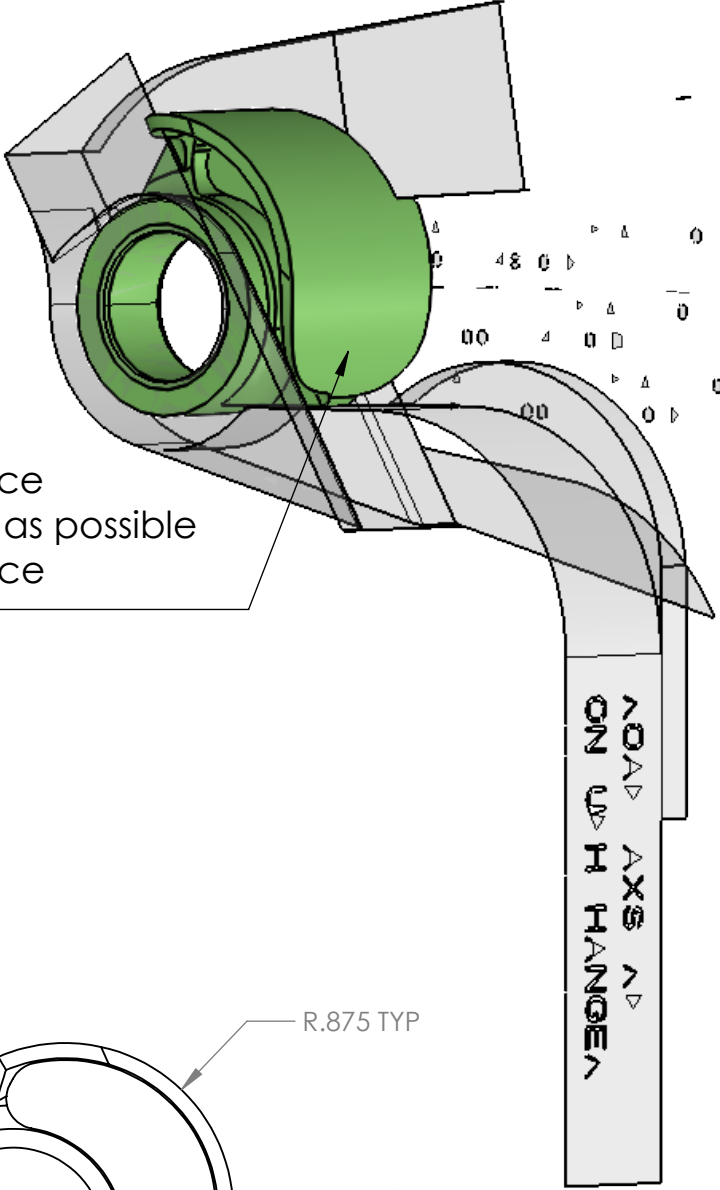

A

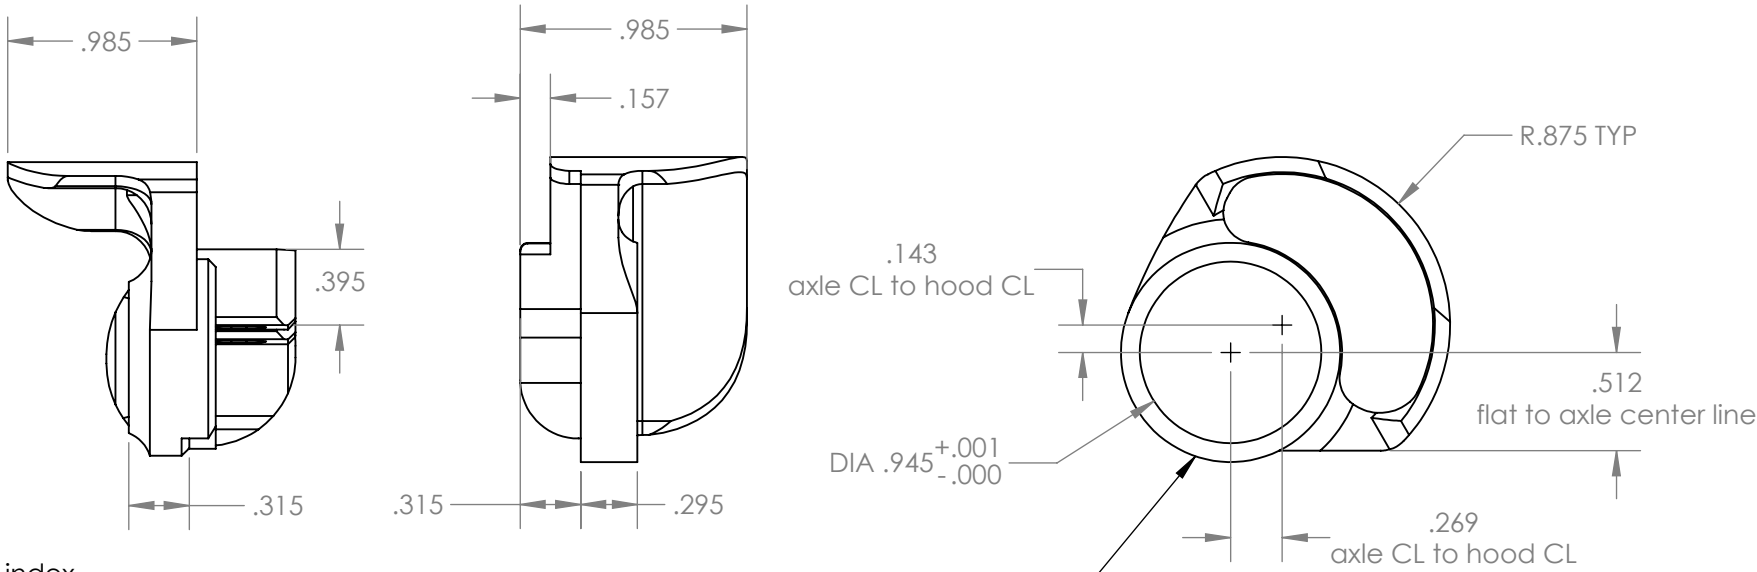

bushings must be purchased separately

PART #	MATERIAL	OFFSET
MS1081	303 STAINLESS	0mm
MS1082	303 STAINLESS	.5mm
MS1083	303 STAINLESS	1mm

		NAME	DATE	PARAGON MACHINE WORKS	
DRAWN		LL	4/25		
CHECKED					
ENG APPR.					
MFG APPR.					
Q.A.				TITLE: Left and Right frame components for eccentric SRAM UDH/T-Type dropout, 1-3/4" OD, 140/160 Flat Mount	
PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF PARAGON MACHINE WORKS. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF PARAGON MACHINE WORKS IS PROHIBITED.					
SIZE		DWG. NO.		REV	
B		DR2078			
SCALE: 1:1		WEIGHT:		SHEET 1 OF 1	