

4


3

2



1

B

B

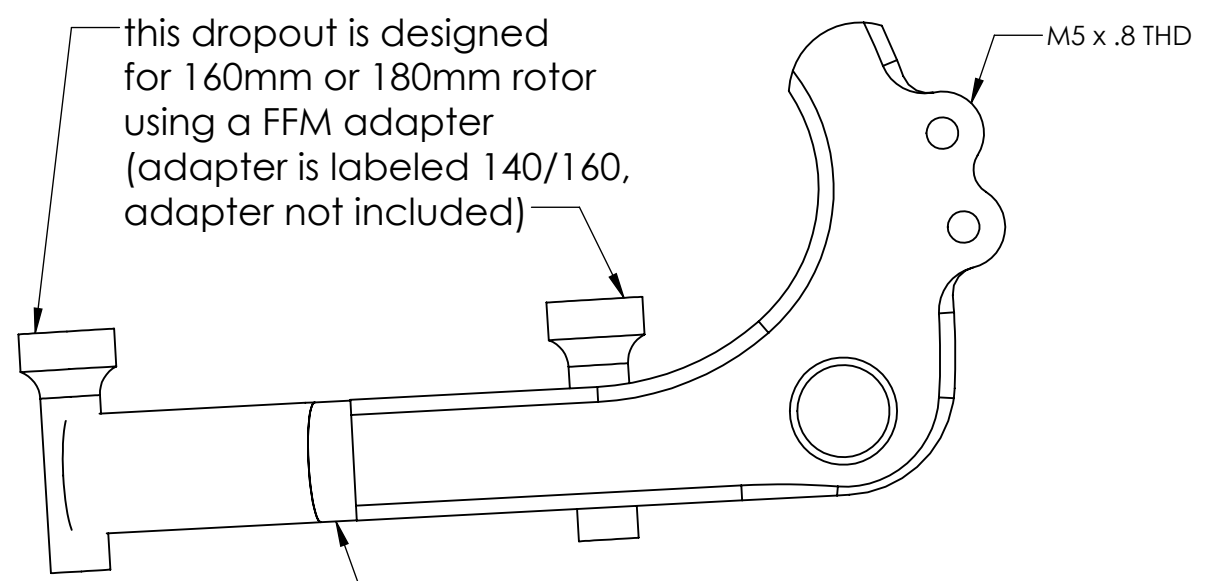

it is recommended that the chainstay gets welded to the dropout tab before installing brake bosses

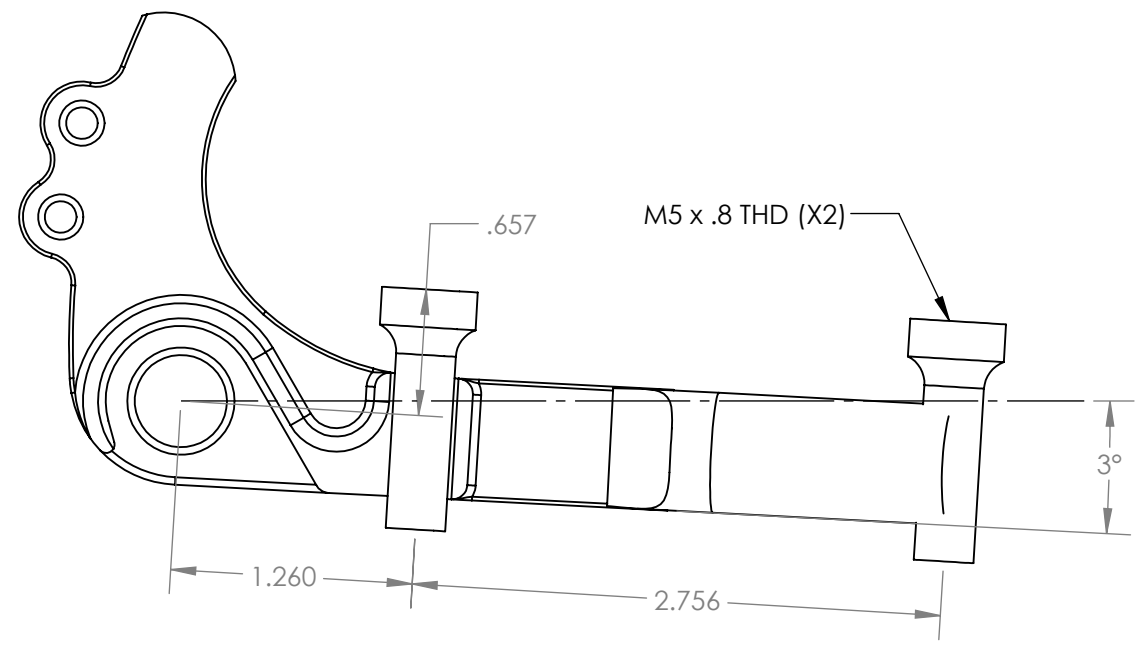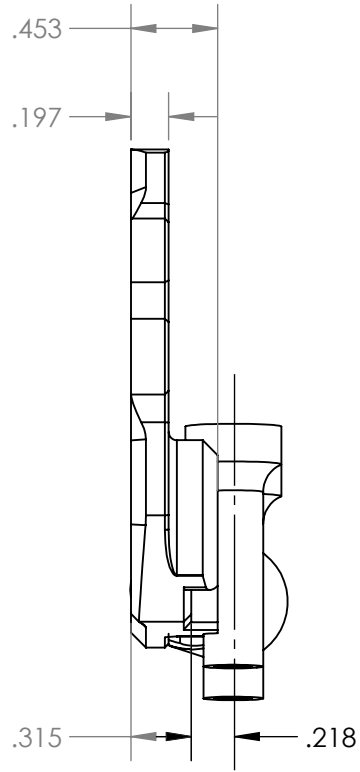

A

A

4

3

2

1

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF PARAGON MACHINE WORKS. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF PARAGON MACHINE WORKS IS PROHIBITED.

	NAME	DATE	PARAGON MACHINE WORKS	
DRAWN	L.L	10/23	TITLE: LEFT SIDE FRAME COMPONENTS FOR UDH/T-TYPE DROPOUT WITH FLAT MOUNT FOR 160mm ROTOR	
CHECKED			SIZE	DWG. NO.
ENG APPR.			B	DR2104
MFG APPR.			SCALE: 1:1	WEIGHT:
Q.A.			SHEET 1 OF 2	
COMMENTS:			REV	